

# Introducing the NEW Recess Plate



## Product Code: RP-200

The RP-200 Recess Plate is designed to be fitted to a Tapepro 200mm Flat box, to reduce the finished width to 140mm. This is great for filling the recess after taping and provides a clean machine finish, feathered at the shoulder of the recess.

The plate is manufactured from durable high grade stainless steel, and fits easily to the 200mm Flat Box without requiring any modifications.

### To fit the recess plate:


- Slide the plate under the skids until the front edge touches the brass blade holder.
- Push the legs down to lock in behind the wheel axle.

### It works well in the following system:

- Tape in flat joints using a Mud Box or other taping tool
- Flatten tape with a joint knife
- Fill and finish the recess with 200mm Flat Box and Recess Plate
- When dry, coat with 200mm Flat Box
- When dry, finish with 300mm Flat Box

Depending on compound consistency, try a blade tension setting of 4 or 5.

Watch the video at [youtube.com/tapeprodrywalltools](https://youtube.com/tapeprodrywalltools)

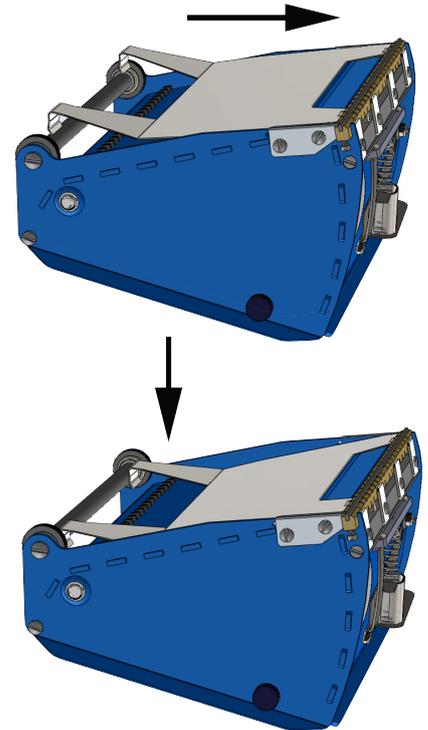

Scan the image with your smartphone and QR reader app to watch the video:



**TAPEPRO**  
**DRYWALL TOOLS**